



TP 80-4


The SPM Energy Flux Method for Predicting Longshore Transport Rate

Ьу

Cyril Galvin and Charles R. Schweppe

TECHNICAL PAPER NO. 80-4

JUNE 1980

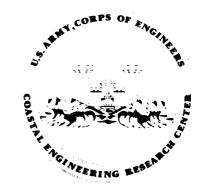

CELECTE SECOND

Approved for public release; distribution unlimited.

DC FILE COPY

U.S. ARMY, CORPS OF ENGINEERS
COASTAL ENGINEERING
RESEARCH CENTER

Kingman Building Fort Belvoir, Va. 22060

80 8 11 119

Reprint or republication of any of this material shall give appropriate credit to the U.S. Army Coastal Engineering Research Center.

Limited free distribution within the United States of single copies of this publication has been made by this Center. Additional copies are available from:

> National Technical Information Service ATTN: Operations Division 5285 Port Royal Road Springfield, Virginia 22161

The findings in this report are not to be construed as an official Department of the Army position unless so designated by other authorized documents.

UNCLASSIFIED
SECURITY CLASSIFICATION OF THIS PAGE (When Date Entered)

I. REPORT NUMBER	REPORT DOCUMENTATION PAGE		
TD 00 4	✓		3. RECIPIENT'S CATALOG NUMBER
TP 80-4		AD-A087	732
4. TITLE (and Subtitle)			5. TYPE OF REPORT & PERIOD COVER
THE SPM ENERGY FL	UX METHOD FOR PR	REDICTING	7) Technical Paper
LONGSHORE TRANSPO	RT RATE.		6. PERFORMING ORG. REPORT NUMBER
7. AUTHOR(e)		· · · · · · · · · · · · · · · · · · ·	8. CONTRACT OR GRANT NUMBER(*)
Cyril/Galvin Charles R./Schwep	PC)=-	WINA
PERFORMING ORGANIZATI			10. PROGRAM ELEMENT, PROJECT, TAS AREA & WORK UNIT NUMBERS
Department of the Coastal Engineeri	: AIMY na Research Cent	er (CERRE_CP)	
Kingman Building,	Fort Belvoir, V		D31196
Department of the			June 1980
Coastal Engineeri	ng Research Cent		13. NUMBER OF PAGES
Kingman Building, MONITORING AGENCY NA			34
the second secon			15. SECURITY CLASS. (of this report)
一 14) イナニー	ーナナーノン		UNCLASSIFIED
			15a. DECLASSIFICATION DOWNGRADING
	T (of the abstract entered	in Block 20, If different fro	m Report)
17. DISTRIBUTION STATEMEN			
IS. SUPPLEMENTARY NOTES	verse side if necessary e n	d identify by block number;	
9. KEY WORDS (Continue on re	verse side if necessary en engineering		re transport rate
18. SUPPLEMENTARY NOTES 9. KEY WORDS (Continue on re	engineering		e transport rate
S. KEY WORDS (Continue on re Coastal Energy	engineering flux	Longshor Wave hei	ght

DD 1 JAN 73 1473 EDITION OF 1 NOV 45 IS OPSOLETE

SECURITY CLASSIFICATION OF THIS PAGE (Mon Dote Entered)

PREFACE

This report is published to provide coastal engineers with detailed explanations of three frequently asked questions concerning the energy flux method described in Section 4.532 of the Shore Protection Manual (SPM). The questions involve the derivation of equations for the energy flux factor, the use of significant wave height in these equations, and the data used to relate energy flux factors to longshore transport rate. These questions require more elaborate explanations than is possible in the SPM. The work was carried out under the coastal processes research program of the U.S. Army, Coastal Engineering Research Center (CERC).

The report was written by Dr. Cyril Galvin, formerly Chief, Coastal Processes Branch, and Charles R. Schweppe, formerly a student trainee in Coastal Processes Branch, under the general supervision of R.P. Savage, Chief, Research Division, CERC. The authors wish to thank C.M. McClennan for advice on the derivation, D.L. Harris for help with the significant wave height, T.L. Walton for pointing out the importance of the breaker speed estimate, and P. Vitale, principal investigator of the longshore transport prediction work unit.

Comments on this publication are invited.

Approved for publication in accordance with Public Law 166, 79th Congress, approved 31 July 1945, as supplemented by Public Law 172, 88th Congress, approved 7 November 1963.

TED E RISHOP

Colonel, Corps of Engineers

Commander and Director

Accession For	4
MTIS GRAAI DDC TAB Unannounced Justification	
Ву	\exists
Distribution/	
Dist Availability Codes Availand/or special	7

CONTENTS

	Pa CONVERSION FACTORS, U.S. CUSTOMARY TO METRIC (SI)	
	CONVERSION PACIONS, U.S. COSTOMART TO METRIC (SI)	J
	SYMBOLS AND DEFINITIONS	6
I	INTRODUCTION	9
II	DISCUSSION OF THE THREE APPENDIXES	9
	1. Ine Equations (App. A)	9
	2. Wave Height (App. B)	
	3. The Data (App. C)	ΙU
III	WAVE SPEED AND BREAKER ANGLE	10
IV	SUMMARY	12
	LITERATURE CITED	13
APPENDIX		
Α	DERIVATION OF LONGSHORE ENERGY FLUX FACTOR	15
В	DISTINCTION BETWEEN SIGNIFICANT AND ROOT-MEAN-SQUARE WAVE	
-	HEIGHTS IN PREDICTING LONGSHORE TRANSPORT RATES	25
С	FIELD AND LABORATORY DATA IN THE SPM ENERGY FLUX DISCUSSION.	30

CONVERSION FACTORS, U.S. CUSTOMARY TO METRIC (SI) UNITS OF MEASUREMENT

U.S. customary units of measurement used in this report can be converted to metric (SI) units as follows:

Multiply	by	To obtain
inches	25.4	millimeters
	2.54	centimeters
square inches	6.452	square centimeters
cubic inches	16.39	cubic centimeters
feet	30.48	centimeters
•	0.3048	meters
square feet	0.0929	square meters
cubic feet	0.0283	cubic meters
yards	0.9144	meters
square yards	0.836	square meters
cubic yards	0.7646	cubic meters
miles	1.6093	kilometers
square miles	259.0	hectares
knots	1.852	kilometers per hour
acres	0.4047	hectares
foot-pounds	1.3558	newton meters
millibars	1.0197×10^{-3}	kilograms per square centimeter
ounces	28.35	grams
pounds	453.6	grams
•	0.4536	kilograms
ton, long	1.0160	metric tons
ton, short	0.9072	metric tons
degrees (angle)	0.01745	radians
Fahrenheit degrees	5/9	Celsius degrees or Kelvins ¹

¹To obtain Celsius (C) temperature readings from Fahrenheit (F) readings, use formula: C = (5/9) (F -32).

To obtain Kelvin (K) readings, use formula: K = (5/9) (F -32) + 273.15.

SYMBOLS AND DEFINITIONS

- A(w) spectrum function of the amplitude of η (see eq. B-5)
- a_t vertical distance from breaker wave trough to MWL (see Fig. A-3)
- B(t) envelope function (see eq. B-6 and Fig. B-2)
- b crest length between orthogonals (see Fig. A-2)
- b subscript for condition at the breaker
- C wave velocity
- d water depth
- \overline{E} wave energy density (see eq. B-1) with subscripts
- g acceleration of gravity
- H wave height
- H' deepwater height assuming no refraction
- He mean value of the highest fraction of wave heights above a height H which has a probability, p, of occurrence (see eqs. B-8 and B-10)
- H_{rms} root-mean-square height (eq. B-3)
- H₈ significant wave height (eq. B-13)
- h water depth measured from wave crest to bottom (Fig. A-3)
- h* generalized water depth under a breaking wave (eq. 2)
- i subscript for conditions at point i (Fig. A-2)
- K_n refraction coefficient (eq. A-11)
- K₈ shoaling coefficient (eq. A-12)
- L wavelength
- ln natural log symbol
- N number of waves
- n ratio of group velocity to individual wave velocity (eq. A-17)
- subscript for conditions in deep water (except eq. B-6)
- P energy flux, per unit length of shoreline, defined by equation (A-6)
- P(H) probability function of wave height

SYMBOLS AND DEFINITIONS--Continued

- P* energy flux per unit length of wave crest (eq. A-1)
- P_{ℓ} part of the energy flux in waves defined by equation (A-7)
- $P_{\mbox{\sc l}\mbox{\sc S}}$ approximate evaluation of $\mbox{\sc P}_{\mbox{\sc l}}$ for conditions in the surf zone
- p fraction of wave heights, in a train of N waves, whose height exceeds H (eq. B-8)
- Q volume rate of longshore transport
- s distance in the longshore direction between adjacent orthogonals (Fig. A-2)
- T wave period
- t time, or conversion factor, seconds per year
- w weight density of water
- α angle between wave crest and shoreline (Fig. A-2)
- β ratio of breaker depth to breaker height (Fig. A-3)
- η departure of water surface from MWL (Fig. B-2)
- ρ mass density of water
- σ ratio a_t/H_b (Fig. A-3)
- ω, ω_{Q} wave frequency or central wave frequency (eq. B-6)

THE SPM ENERGY FLUX METHOD FOR PREDICTING LONGSHORE TRANSPORT RATE

by Cyril Galvin and Charles R. Schweppe

I. INTRODUCTION

The Shore Protection Manual (SPM) (U.S. Army, Corps of Engineers, Coastal Engineering Research Center, 1977) describes procedures for estimating quantities important in coastal engineering design. Among the most important of these is the estimation of longshore transport rate. Aside from relying solely on judgment or historical data, the principal way to estimate longshore transport rate is by use of the energy flux method, described in Section 4.532 of the SPM. Since the SPM provides design guidance rather than explanation, the derivations of the energy flux equations are only briefly indicated in the manual.

This report supplements the SPM with a documented development of the energy flux method as it is presented on pages 4-96 to 4-102 of the SPM. The documentation is mainly found in the three appendixes to this report: Appendix A, Derivation of the Longshore Energy Flux Factor; Appendix B, Distinction Between Significant and Root-Mean-Square Wave Heights in Predicting Longshore Transport Rates; and Appendix C, Field and Laboratory Data Appearing in the SPM Energy Flux Discussion. The subject matter of these appendixes are the three most commonly questioned aspects of the SPM presentation on the energy flux method. Each appendix gives an independent explanation of one topic without necessary cross-reference to other parts of the report.

This report only describes what was done to arrive at the energy flux method already published in the SPM. The assumptions necessary to arrive at the formulation in the SPM are described, but not reviewed, although these assumptions were closely examined by reviewers when Chapter 4 of the SPM was under preparation (May 1972 to August 1973). The current issue of the SPM is the third edition (1977). Section 4.532 on the energy flux method is the same in all three editions, with the exception of an error on the ordinate scale of Figure 4-36 which was corrected after the first (1973) printing. Galvin and Vitale (1977) compared the energy flux method documented in the SPM with its predecessor, TR-4, Shore Protection, Planning and Design (U.S. Army, Corps of Engineers, 1966).

II. DISCUSSION OF THE THREE APPENDIXES

1. The Equations (App. A).

The energy flux method relates longshore transport rate, Q, to wave conditions by use of the longshore energy flux factor, P_{ls} . Two equations are needed: an equation that converts wave conditions into P_{ls} , and an equation that predicts Q from P_{ls} . In the SPM, four theoretically equivalent equations for longshore energy flux, P_{l} , are developed from small-amplitude, linear theory. From these four equations, four design equations for the longshore energy flux factor in the surf zone, P_{ls} , are derived. Although each equation for P_{l} is equivalent to any of the three other equations for P_{l} , no two of the four P_{l} equations are exactly equivalent because each P_{l} equation was derived from a different P_{l} equation using a different set of approximations.

The four equations for P_{ℓ} , equations 4-31 to 4-34, and the four equations for $P_{\ell S}$, equations 4-35 to 4-38, are given in Tables 4-7 and 4-8, respectively, in the SPM, and they are reproduced in Appendix A.

Appendix A derives the eight equations and identifies the assumptions used. These derivations involve only simple algebra and the assumptions are standard. However, the exact formulation of the assumptions does affect the value of coefficients in the equations.

2. Wave Height (App. B).

The energy flux factor, P_{lS} , depends sensitively on wave height. In one equation, it is an H^2 dependence; in another one, H^3 ; and in two equations, $H^{5/2}$. In all, the height enters P_{lS} primarily as the energy density, \overline{E} , which depends on H^2 . Since, in nature, height varies from one wave to the next, the average energy density of a group of waves will not be determined from the average height, but rather from a height which produces the average value of H^2 . This is the root-mean-square (rms) height, H_{rms} .

The height commonly used in coastal engineering work is neither the average height nor the $H_{\gamma m S}$, but the significant height, H_S . Appendix B explains the relations between $H_{\gamma m S}$ and H_S , and how the energy flux factor is calibrated for use with H_S .

The Data (App. C).

To obtain an equation to predict Q from P_{ls} , it is necessary to have sufficient data for wave conditions to compute P_{ls} and to measure values of Q at the time the wave conditions are measured. Appendix C identifies the sources of data which led to the relation between Q and P_{ls} shown in Figure 4-37 and equation 4-40 of the SPM.

III. WAVE SPEED AND BREAKER ANGLE

This report primarily provides documentation for the energy flux method as given in Section 4.532 of the SPM. It does not critically evaluate the method. However, this section does examine the effect of assumptions about wave speed and breaker angle on the computed values of Q to enable the user to form a judgment of the overall accuracy.

The energy flux is proportional to group velocity. The group velocity for linear waves in shallow water is equal to wave speed. For energy flux entering the surf zone, the appropriate wave speed is the speed of the breaker. Breaker characteristics have long been assumed to be described by solitary wave theory. Solitary theory can be used to locate the breaker point using the rule-of-thumb

$$d_b = 1.28 H_b$$
 (1)

and to estimate the breaker speed using an equation of the form,

$$C_b^* = \sqrt{gh^*}$$
 (2)

where h^* is a depth. If h^* is set equal to the mean depth, then the breaker speed is that of linear theory

$$C_b = \sqrt{gd_b}$$

or using equation (1)

= 6.42
$$\sqrt{H_b}$$
 (feet per second) (3)

If h^* is set equal to the depth under the crest of the breaking wave, and the depth is properly corrected for the depression of the trough below mean water level, the result is

$$C_h = 8.02 \sqrt{H_h}$$
 (feet per second) (4)

If h^* is set equal to $H_b + d_b$ without correcting for depression of trough below mean water level, the speed will be

$$C_b = 8.57 \sqrt{H_b}$$
 (feet per second) (5)

Since wave speed enters as a linear multiplier in the equation for energy flux, the estimated energy flux will vary directly as the estimated wave speed. The field data plotted on Figure 4-37, from which the relation between Q and P_{ls} is obtained, include estimates of P_{ls} using equations (3) and (5). The nine data points from Watts (1953) and Caldwell (1956) have energy flux values computed with equation (3). The 14 data points from Komar (1969) include energy flux estimates based on both equations (3) and (5). Equation (4) is used in the derivations for all P_{ls} equations, as shown in Appendix A.

Since the P_{lS} equations used in the SPM depend on equation (4) for wave speed, it is evident that wave speed has not been treated consistently throughout the analysis. The P_{lS} computed with the equations in the SPM (depending on eq. 4 for wave speed) will be 25 percent too high for the plotted relation between Q and P_{lS} for the points of Watts (1953) and Caldwell (1956) on Figure 4-37.

The error between the SPM P_{LS} equations and the 14 data points of Komar (1969) is more difficult to evaluate. The depth used by Komar is the 20-minute time average at the wave gage (P.D. Komar, Oregon State University, personal communication, 1978). This depth was often significantly deeper than the breaker depth, as can be judged from the fact that the average crest angle at the wave gage was about 57 percent greater than the average breaker angle in Komar's data (App. IV of Komar, 1969). Thus, the use of the depth at the gage raises the speed above the linear theory estimate of equation (3) toward the value of equation (4). Since it is not easy to evaluate this effect, and since the relation between P_{LS} and Q is heavily dependent on the 14 plotted points of Komar, the error due to using equation (4) for breaker speed in calculating P_{LS} is concluded to be less than 25 percent and may be negligible.

Moreover, the Komar (1969) data for energy flux probably include an overestimate of the breaker angle. This is because breaker angle, α_b , was computed from the angle at the sensor, α , by

$$\sin \alpha_b = \frac{C_b}{C} \sin \alpha$$

where C_b was effectively equation (5) and C was equation (3). Since equation (5) probably overestimates wave speed (by about 7 percent) and equation (3) underestimates it (by about 10 percent), the resulting breaker angle probably should be multiplied by (1 - 0.10)/(1 + 0.07) or 0.84 to be theoretically correct.

The net result of the variable estimates of wave speed and breaker angle is to suggest that equation (4) is a logical compromise, and this is what is used in the SPM equations.

IV. SUMMARY

This report describes the energy flux method of estimating longshore transport rate and provides detailed explanations of the three most frequently asked questions about this method (see Apps. A, B, and C). The following general conclusions result from this study.

- 1. Energy flux may be estimated by four separate methods, depending on the available field data. The results show that the energy flux factor, $P_{\ell S}$, is proportional to any one of the following groups of wave variables (App. A):
 - (a) $H_b^{5/2} \sin 2\alpha_b$
 - (b) $H_0^{5/2} (\cos \alpha_0)^{1/4} \sin 2\alpha_0$
 - (c) H^2 T sin α_b cos α_o

(d)
$$\left(\frac{H_b^3}{T}\right) \sin \alpha_o$$

- 2. The wave height used in these equations is the significant wave height $(App.\ B)$.
- 3. Longshore transport rate, Q, is directly proportional to the energy flux factor, $P_{\ell S}$. The indicated proportionality constant is 7,500 for traditional units (Q in cubic yards per year and $P_{\ell S}$ in foot-pounds per second per foot). Appendix C describes the data used to derive this constant.
- 4. There is uncertainty in the proportionality constant because of variations in field data, in the equation for breaker speed, and in measurement of breaker angle. An intuitive estimate of the uncertainty in the constant is \pm 40 percent.
- 5. The energy flux method is expected to be improved with further knowledge.

LITERATURE CITED

- BRETSCHNEIDER, C.L., and REID, R.O., "Modification of Wave Height Due to Bottom Friction, Percolation, and Refraction," TM-45, U.S. Army, Corps of Engineers, Beach Erosion Board, Washington, D.C., Oct. 1954.
- CALDWELL, J.M., "Wave Action and Sand Movement Near Anaheim Bay, California," TM-68, U.S. Army, Corps of Engineers, Beach Erosion Board, Washington, D.C., Feb. 1956.
- DAS, M.M., "Longshore Sediment Transport Rates: A Compilation of Data," MP 1-71, U.S. Army, Corps of Engineers, Coastal Engineering Research Center, Washington, D.C., Sept. 1971.
- DAS, M.M., "Suspended Sediment and Longshore Sediment Transport Data Review," Proceedings of the 13th International Conference on Coastal Engineering, American Society of Civil Engineers, Vol. II, July 1972, pp. 1027-1048 (also Reprint 13-73, U.S. Army, Corps of Engineers, Coastal Engineering Research Center, Fort Belvoir, Va., NTIS 770 179).
- FAIRCHILD, J.C., "Laboratory Tests of Longshore Transport," Proceedings of the 12th Conference on Coastal Engineering, American Society of Civil Engineers, Vol. II, Sept. 1970, pp. 867-889.
- GALVIN, C.J., Jr., "Breaker Travel and Choice of Design Wave Height," Journal of the Waterways and Harbors Division, Vol. 95, No. WW2, May 1969, pp. 175-200 (also Reprint 4-70, U.S. Army, Corps of Engineers, Coastal Engineering Research Center, Fort Belvoir, Va., NTIS 712 652).
- GALVIN, C.J., Jr., and VITALE, P., "Longshore Transport Prediction SPM 1973 Equation," Proceedings of the 15th Conference on Coastal Engineering, American Society of Civil Engineers, Vol. II, July 1976, pp. 1133-1148.
- HARRIS, D.L., "Characteristics of Wave Records in the Coastal Zone," Waves on Beaches and Resulting Sediment Transport, R.E. Meyer, ed., Academic Press, New York, 1972, pp. 1-51.
- HARRIS, D.L., "Wave Energy Estimates," U.S. Army, Corps of Engineers, Coastal Engineering Research Center, Fort Belvoir, Va., unpublished, Oct. 1973.
- IVERSEN, H.W., "Waves and Breakers in Shoaling Water," *Proceedings of the Third Conference on Coastal Engineering*, American Society of Civil Engineers, 1952, pp. 1-12.
- JOHNSON, J.W., "Sand Transport by Littoral Currents," Technical Report Series 3, Issue 338, Institute of Engineering Research, University of California, Berkeley, Calif., June 1952.
- KINSMAN, B., Wind Waves, Their Generation and Propagation on the Ocean Surface, 1st ed., Prentice-Hall, Englewood Cliffs, N.J., 1965.
- KOMAR, P.D., "The Longshore Transport of Sand on Beaches," unpublished Ph.D. Thesis, University of California, San Diego, Calif., 1969.
- KRUMBEIN, W.C., "Shore Currents and Sand Movement on a Model Beach," TM-7, U.S. Army, Corps of Engineers, Beach Erosion Board, Washington, D.C., Sept. 1944.

- LONGUET-HIGGINS, M.S., "On the Statistical Distribution of the Height of Sea Waves," Journal of Marine Research, Vol. 11, No. 3, 1952, pp. 245-266.
- LONGUET-HIGGINS, M.S., "Longshore Currents Generated by Obliquely Incident Sea Waves, 1," Journal of Geophysical Research, Vol. 75, No. 33, Nov. 1970, pp. 6788-6801.
- MOORE, G.W., and COLE, A.Y., "Coastal Processes, Vicinity of Cape Thompson, Alaska," Trace Element Investigation Report 753, U.S. Geological Survey, Washington, D.C., Jan. 1960.
- PRICE, W.A., and TOMLINSON, K.W., "The Effect of Groynes on Stable Beaches," *Proceedings of the 11th Conference on Coastal Engineering*, American Society of Civil Engineers, Vol. 1, 1969, pp. 518-525.
- SAUVAGE, M.G., and VINCENT, M.G., "Transport Littoral Formation de Fleches et de Tombolos," *Proceedings of the Fifth Conference on Coastal Engineering*, American Society of Civil Engineers, 1954, pp. 296-328.
- SAVILLE, T., Jr., "Model Study of Sand Transport Along an Infinitely Long Straight Beach," Transactions of the American Geophysical Union, Vol. 31, 1950, pp. 555-565.
- SAVILLE, T., Jr., "Discussion of Laboratory Determination of Littoral Transport Rates," *Journal of Waterways and Harbors Division*, Vol. 88, No. WW4, Nov. 1962, pp. 141-143.
- SHAY, E.A., and JOHNSON, J.W., "Model Studies on the Movement on Sand Transported by Wave Action Along a Straight Beach," Issue 7, Series 14, Institute of Engineering Research, University of California, Berkeley, Calif., 1951.
- SVERDRUP, H.U., and MUNK, W.H., "Wind, Sea, and Swell: Theory of Relations for Forecasting," Publication No. 601, U.S. Navy Hydrographic Office, Washington, D.C., Mar. 1947.
- THORNTON, E.B., "Longshore Current and Sediment Transport," TR-5, Department of Coastal and Oceanographic Engineering, University of Florida, Gainesville, Fla., Dec. 1969.
- U.S. ARMY, CORPS OF ENGINEERS, "Shore Protection Planning and Design," TR-4, 3d ed., Coastal Engineering Research Center, Washington, D.C., 1966.
- U.S. ARMY, CORPS OF ENGINEERS, COASTAL ENGINEERING RESEARCH CENTER, Shore Protection Manual, 3d ed., Vols. I, II, and III, Stock No. 008-022-00113-1, U.S. Government Printing Office, Washington, D.C., 1977, 1,262 pp.
- WALTON, T.L., Jr., "Littoral Drift Computations Along the Coast of Florida by Use of Ship Wave Observations," unpublished Thesis, University of Florida, Gainesville, Fla., 1972.
- WATTS, G.M., "A Study of Sand Movement at South Lake Worth Inlet, Florida," TM-42, U.S. Army, Corps of Engineers, Beach Erosion Board, Washington, D.C., Oct. 1953.
- WIEGEL, R.L., Oceanographic Engineering, 1st ed., Prentice-Hall, Englewood Cliffs, N.J., 1964.

APPENDIX A

DERIVATION OF LONGSHORE ENERGY FLUX FACTOR

This appendix derives four formulas for longshore energy flux, P_{ℓ} , and four formulas for corresponding approximations, the longshore energy flux factors, $P_{\ell s}$. These eight formulas are given in the SPM in Tables 4-7 and 4-8, based on assumptions summarized in Table 4-9. For convenience, Tables 4-7 and 4-8 are reproduced here as Figure A-1 (p. 4-97 of the SPM).

The basic longshore energy flux derivation is given in Galvin and Vitale (1977), who made use of earlier work by Walton (1972). The derivation also benefits from Longuet-Higgins' (1970) work on conservation of momentum flux in the surf zone. Equations well known from linear wave theory are presented without derivation but are keyed to other chapters in the SPM, or to the development in Wiegel (1964) where more detailed derivation is provided.

1. Equations for P_{ℓ} .

The derivation for P_{ℓ} proceeds as follows: Assume a coast with contours that are parallel to a straight shoreline (Fig. A-2). Waves approaching this coast are assumed to be described by linear small-amplitude theory. In general, a wave crest that makes an angle $\alpha_{\mathcal{O}}$ with the shoreline when in deep water will refract to make an angle $\alpha_{\tilde{i}}$ at some shallower depth (Fig. A-2), where $\alpha_{\tilde{i}}$ is related to $\alpha_{\mathcal{O}}$ by Snell's law. In what follows, the subscript \mathcal{O} refers to deepwater conditions, and the symbols are those used in the SPM.

The path of a wave passing through point i is shown on Figure A-2 as the dashed orthogonal labeled "wave path." The flux of energy in the direction of wave travel per unit length of wave crest at point i is given by

$$P^* = C_g \vec{E}$$

$$= n C \vec{E}$$
(A-1)

where C_g is the wave group velocity, C is the wave phase velocity, $n = C_g/C$, and \widetilde{E} is the energy density, the total average energy per unit area of sea surface, and is defined as (eq. 2-39 in the SPM)

$$\overline{E} = \frac{wli^2}{8} \tag{A-2}$$

where w is the weight density of water, 64.0 pounds per cubic foot for seawater, and H is the wave height. (This wave height is the height of a uniform periodic wave. How it relates to the significant wave height and to wave heights characterizing wave height distributions is discussed in App. B.)

From equation (A-1), the energy flux in the direction of wave travel, at point i, for crest length, b_i , is (see eq. 7 in Galvin and Vitale, 1976)

$$P^* b_{i} = \overline{E} C_g b_{i}$$
 (A-3)

Table 4-7. Longshore Energy Flux, Pq, for a Single Periodic Wave in Any Specified Depth. (Four Equivalent Expressions from Small-Amplitude Theory)

Equation	Pg (energy/time/distance)	Data Required (any consistent units)
4-31	2C _e (¼ Ē sin 2α)	d, T, H, α_o
4-32	C ($\frac{1}{4}$ $E_o \sin 2\alpha_o$)	d, T, H_o, α_o
4-33	$\mathbf{K}_{R}^{2}\mathbf{C}_{o}$ ($\frac{1}{4}\mathbf{E}_{o}$ sin 2α)	T, H_o, α_o, α
4-34	(2C) $(K_R^2 C_o)^1 C_g (\frac{1}{4} E \sin 2\alpha_o)$	d, T, H, α_o , α

no subscript indicates a variable at the specified depth where small-amplitude theory is valid

C_g = group velocity (see assumption 1b, Table 4-9)

C = decpwater

d = water depth

H = significant wave height

T = wave period

a = angle between wave crest and shoreline

 $K_R = refraction coefficient \sqrt{\frac{\cos \alpha_o}{\cos \alpha}}$

Table 4-8. Approximate Formulas for Computing Longshore Energy Flux Factor, Pcs, Entering the Surf Zone

Equation	Pgs (ftlbs./sec./ft. of beach front)	Data Required (ftsec. units)
435	32.1 H _b ^{5/2} sin 2α _b	H_b, α_b
4-36	$18.3 \text{H}_o^{5/2} (\cos \alpha_o)^{1/4} \sin 2\alpha_o$	H_o, α_o
4-37	20.5 T H _o ² sin α_b cos α_o	$T, H_o, \alpha_o, \alpha_b$
4-38	100.6 (H _b ³ /T) $\sin \alpha_o$	T, H_b, α_o

Ho = deepwater

H_b = breaker position

H = significant wave height

T = wave period

a = angle between wave crest and shoreline

See Table 4-7 for equivalent small amplitude equations and Table 4-9 for assumptions used in deriving P_{Q_S} from P_{Q_S} .

4-97

Figure A-1. Page 4-97 of the SPM, showing four formulas for longshore energy flux, P_{ℓ} , and four formulas for longshore energy flux factors, $P_{\ell e}$.

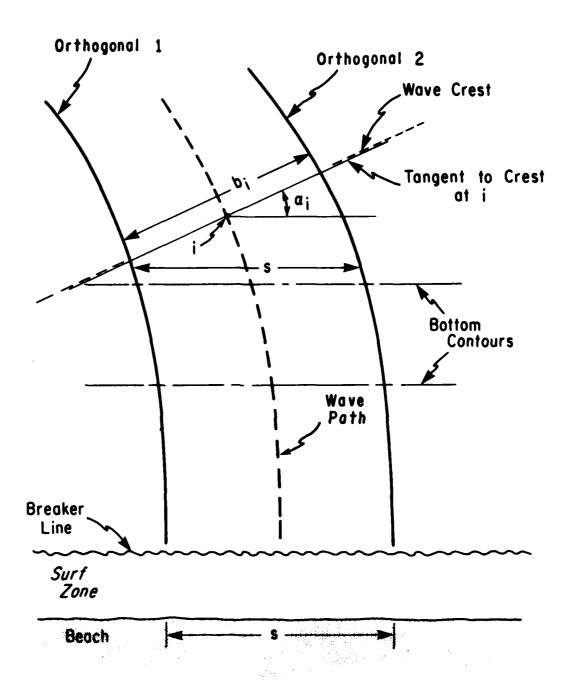


Figure A-2. Definitions for conservation of energy flux for shoaling wave (after Walton, 1972).

In the small-amplitude theory assumed, energy is not dissipated and does not cross wave orthogonals. Therefore, the energy flux in the direction of wave travel must remain constant between orthogonals, i.e., between deep water and point i.

$$P_o^*b_o = P_i^*b_i = \text{total wave power between orthogonals}$$
 (A-4)

From the geometry of Figure A-2, it is obvious that b_i changes with position on the wave path. However, the distance between adjacent orthogonals, s, measured in the longshore direction, does not change because orthogonal 2 must be identical to orthogonal 1 in all respects except being displaced along the coast by a distance s. Therefore, at any point, i, in the wave path

$$b_{i} = s \cos \alpha_{i} \tag{A-5}$$

For the straight parallel contours assumed, the distance $\,s\,$ is arbitrary. Therefore, divide both sides of equation (A-4) by $\,s\,$, and set $\,s\,$ equal to the unit of distance. In the SPM, this unit is 1 foot; in metric units, it would be 1 meter. This procedure defines a total wave power, per unit length of shoreline, indicated by $\,P\,$

$$P = P^* \cos \alpha_i \tag{A-6}$$

In the Appendix, i indicates any point on the path where equations (A-1) to (A-5) are valid. With this understanding, the subscript i is dropped in the derivation below. Since P has both a magnitude and a direction at any point, a longshore component, P_{ℓ} , can be defined. Using equations (A-1) and (A-6), this longshore component of energy flux can be written

$$P_{\ell} = (\widetilde{E}C_{g} \cos \alpha) \sin \alpha \qquad (A-7)$$

By use of the identity

$$\sin 2 \alpha = 2 \cos \alpha \sin \alpha$$
 (A-8)

equation (A-7) can be written as the first of the four alternate forms for P_{ϱ} given in Table 4-7 of the SPM, i.e., equation (4-31) in the SPM:

$$P_{\ell} = 2 C_g \left(\frac{1}{4} \widetilde{E} \sin 2\alpha \right)$$
 (A-9)

The equation is given in this form so that the term in parentheses corresponds to the longshore force term used in Longuet-Higgins (1970). The energy density, \overline{E} , is proportional to the local height squared, H^2 , (eq. A-2). The local height can be related to the deepwater height, H_O , by equations (7.8) and (7.9) in Wiegel (1964)

$$H = K_R K_S H_O \tag{A-10}$$

where K_R is the refraction coefficient

$$K_R = \left(\frac{\cos \alpha_o}{\cos \alpha}\right)^{1/2} \tag{A-11}$$

and K_s is the shoaling coefficient

$$K_{s} = \left(\frac{C_{go}}{C_{g}}\right)^{1/2} \tag{A-12}$$

K_e for later use may also be approximated by the breaker height index

$$K_{s} \sim \frac{H_{b}}{H_{c}} \tag{A-13}$$

where H_h is the wave height at the point of breaking. Thus,

$$\overline{E} = K_R^2 K_S^2 \overline{E}_O$$

$$= \left(\frac{\cos \alpha_O}{\cos \alpha}\right) \left(\frac{C_{gO}}{C_G}\right) \overline{E}_O$$
(A-14)

so P_R becomes

$$P_{\ell} = K_R^2 K_S^2 C_g \overline{E}_o \sin \alpha \cos \alpha \qquad (A-15)$$

By substituting equations (A-11) and (A-12) into equation (A-15) and canceling like terms,

$$P_{R} = C_{QQ} \overline{E}_{Q} \cos \alpha_{Q} \sin \alpha \qquad (A-16)$$

Equation 2.68 of Wiegel (1964) gives that

$$n = \frac{C_{\mathcal{G}}}{C} = \frac{1}{2} \left[1 + \frac{4\pi \frac{d}{L}}{\sinh \left(4\pi \frac{d}{L} \right)} \right] \tag{A-17}$$

where d is the water depth. To a good approximation, n is equal to 0.5 in deep water, i.e., d/L > 0.5, and n is equal to 1.0 in shallow water, i.e., d/L < 0.04. (Exact values of n at these limits are 0.5117 at d/L equal to 0.5, and 0.9795 at d/L equal to 0.04.) Equation (A-16) can be further modified using Snell's law (where C is the local wave speed given by equation (2-3) in the SPM),

$$\sin \alpha = \frac{C \sin \alpha_0}{C_0} \tag{A-18}$$

and equations (A-8) and (A-17) to get the second of the equivalent forms for P_{ℓ} given in Table 4-7 of the SPM, i.e., equation (4-32) in the SPM:

$$P_{\ell} = C\left(\frac{1}{4} \,\overline{E}_O \, \sin \, 2\alpha_O\right) \tag{A-19}$$

The third equivalent form for P_{ℓ} is equation (4-33) in Table 4-7 of the SPM. It is obtained from equation (A-15) by using equations (A-12) and (A-8),

$$P_{\ell} = K_R^2 C_{\mathcal{O}} \left(\frac{1}{4} \overline{E}_{\mathcal{O}} \sin 2\alpha \right)$$
 (A-20)

The fourth and last of the equivalent forms of P_{ℓ} is equation (4-34) in Table 4-7 of the SPM. It is obtained by substituting equations (A-8), (A-11), and (A-18) into equation (A-9),

$$P_{\chi} = \left(\frac{2}{\kappa_{\mathcal{D}}^2}\right) \left(\frac{C}{C_{\mathcal{O}}}\right) C_{\mathcal{G}} \left(\frac{1}{4} \ \overline{E} \ \sin \ 2\alpha_{\mathcal{O}}\right) \tag{A-21}$$

2. Equations for P_{ls} .

Up to this point, all results are for small-amplitude linear theory. However, the assumed relation between longshore transport and energy flux in the surf zone requires that P_{ℓ} be evaluated at the breaker line where small-amplitude theory is less valid. To indicate approximations for waves entering the surf zone, the symbol $P_{\ell s}$ will be used in place of P_{ℓ} . This approximation is called the energy flux factor, $P_{\ell s}$, in the SPM, and like P_{ℓ} , it is measured in units of energy per second per unit length of shoreline; e.g., footpounds per second per foot. One expression for $P_{\ell s}$ will be derived from each of the four equivalent expressions for P_{ℓ} (eqs. A-9, A-19, A-20, and A-21) to obtain the four equations in Table 4-8 of the SPM.

The energy density appears in all four equations for P_{ℓ} . In foot-pound-second units, and for saltwater (w = 64 pounds per cubic foot), the energy density is, from equation (A-2),

$$\overline{E} = \frac{\text{wH}^2}{8}$$

$$\approx 8 \text{ H}^2 \text{ (foot-pounds per square foot)} \tag{A-22}$$

In shallow water, group velocity equals wave speed, and near breaking, wave speed depends on depth measured from the crest elevation, as in solitary wave theory (Section 2.27 in the SPM).

The equation for wave speed near breaking, C_b , is an approximation. Several approximations are possible, but the solitary wave approximation used in obtaining the SPM equations for $P_{\ell s}$ is as follows (symbols defined in Fig. A-3). The first approximation for the speed of the solitary wave is

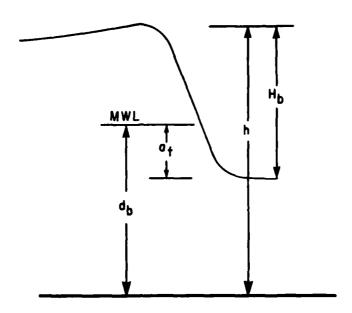


Figure A-3. Definition of terms for breaker speed equation.

$$C_h = \sqrt{gh}$$
 (A-23)

where

$$h = H_b + d_b - a_t$$
 (A-24)

By dividing with H_h , the wave speed becomes

$$C_{j_1} = K\sqrt{H_{j_2}} \tag{A-25}$$

where K is a dimensional term depending on two ratios and g (see eq. 11 in Galvin, 1969)

$$K = \sqrt{g(1 + \beta - \sigma)} \tag{A-26}$$

The depth-to-height ratio, β , was assumed equivalent to the usual coastal engineering rule-of-thumb (β = 1.28). The relative depression of the trough, σ , was known to vary from 0.15 to 0.40, and a standard value of 0.28 was used for σ giving a wave speed of (eq. 4)

$$C_b = 8.02\sqrt{H_b}$$
 (feet per second)

It should be noted that there is recent evidence that both β and σ should have somewhat lower values than those used to obtain equation (4) but the net result of the reductions does not significantly change the coefficient in equation (4).

A third approximation is the replacement

$$\alpha = \alpha_{\tilde{b}} \tag{A-27}$$

where the subscript b refers to breaker zone conditions.

Substituting the approximations represented by equations (4), (A-22), and (A-27) into equation (A-9) yields $P_{\ell S}$ approximations for each of the four equations for P_{ℓ} in Table 4-7.

Equation (4-31) for P_{ϱ} in Table 4-7 of the SPM is approximated by

$$P_{ls} \approx 2(8.02 \text{ H}_b^{1/2}) \frac{1}{4} (8 \text{ H}_b^2) \sin 2\alpha_b$$

= 32.1
$$H_b^{5/2}$$
 sin $2\alpha_b$ (foot-pounds per second per foot) (A-28)

which involves only height and direction at the breaker. This is equation (4-35) of Table 4-8 in the SPM.

In the same way, equation (4-32) for P_{ℓ} (eq. A-19) can be reduced to

$$P_{ls} = 16.0 H_b^{1/2} H_o^2 \sin 2\alpha_o$$
 (foot-pounds per second per foot) (A-29)

 ${\rm H_D}$ is put in terms of ${\rm H_O}$ using equations (A-10) and (A-11) to get

$$\Pi_b^{1/2} = \left(\frac{\cos \alpha_o}{\cos \alpha_b}\right)^{1/4} (K_s H_o)^{1/2}$$
 (A-30)

In this equation, $\cos\alpha_b$ equals 1.0 to a good approximation. For example, even if α_b has a high value of 20° (exceeded less than 5 percent of the time on straight beaches), $(\cos 20^\circ)^{1/4} = 0.98$.

So, using this approximation and substituting equation (A-30) into equation (A-29),

$$P_{ls} = 16.0 \text{ H}_o^{5/2} (\cos \alpha_o)^{1/4} K_s^{1/2} \sin 2\alpha_o \text{ (foot-pounds per second per foot)}$$
 (A-31)

The shoaling coefficient, $K_{\rm S}$, is approximated by the breaker height index. $H_{\rm b}/H_{\rm b}'$, obtained from the experimental work of Iversen (1952). Related data are in Figure 2-65 of the SPM. $H_{\rm b}'$ is the unrefracted deepwater water height. If the slope and period are known, a steepness can be computed, and $H_{\rm b}/H_{\rm b}'$ obtained from these experimental results. However, the period in offshore wave statistics correlates poorly with the littoral wave period (Harris, 1972). A reasonable approximation without using the period is obtained by observing that $H_{\rm b}/H_{\rm b}'$ ranges from 0.95 to 1.7 for plunging and spilling waves, a center range of about 1.3 for expectable slopes and moderately steep waves. Therefore, $K_{\rm S}$ is assumed here to be 1.3. Since Q depends on the square root of $K_{\rm S}$, this assumed value will usually give Q to within 10 percent of the value from Iversen's data when steepness and slope information is available.

This approximation reduces equation (A-31) to a convenient approximation involving only deepwater height and direction, which is equation (4-36) in the SPM:

$$P_{f,g} = 18.3 \, H_o^{5/2} \, (\cos \alpha_o)^{1/4} \, \sin 2\alpha_o \, (foot-pounds per second per foot)$$
 (A-32)

The deepwater wave velocity, C_O , can be approximated by (see eq. 2.37 in Wiegel, 1964)

$$C_O = \frac{gT}{2\pi} = 5.12 \text{ T (feet per second)}$$
 (A-33)

Using this along with equations (A-8), (A-11), and (A-22), the third expression for $P_{\ell,s}$ can be obtained from equation (A-20):

$$P_{ls} \approx \left(\frac{\cos \alpha_o}{\cos \alpha_b}\right) (5.12 \text{ T}) \frac{1}{4} (8 \text{ H}_o^2) (2 \cos \alpha_b \sin \alpha_b)$$

$$= 20.5 \text{ T H}_o^2 \cos \alpha_o \sin \alpha_b \text{ (foot-pounds per second per foot)} \quad (A-34)$$

This is equation (4-37) in the SPM.

The final equation for P_0 , equation (A-21), reduces to

$$P_{ls} \approx 2(8.02 \text{ H}_b^{1/2}) \left(\frac{\cos \alpha_o}{\cos \alpha} 5.12 \text{ T}\right)^{-1} (8.02 \text{ H}_b^{1/2}) (8 \text{ H}_b^2) \left(\frac{1}{2} \cos \alpha_o \sin \alpha_o\right)$$

$$= 100.5 \left(\frac{\text{H}_b^3}{\text{T}}\right) \cos \alpha_b \sin \alpha_o \text{ (foot-pounds per second per foot)} \quad (A-35)$$

by use of equations (4), (A-8), (A-11), (A-22), and (A-33). The $\cos\alpha_{\tilde{D}}$ term in many cases, is close enough to 1.0 to be ignored. Therefore, equation (A-35) can be further reduced to:

$$P_{l.s} = 100.5 \left(\frac{H_b^3}{T}\right) \sin \alpha_o$$
 (foot-pounds per second per foot) (A-36)

This is equation (4-38) in the SPM.

The four approximate equations for $P_{\ell,S}$ (eqs. A-28, A-32, A-34, and A-36) are given in Table 4-8 of the SPM. Unlike the four exact equations (P_{ℓ} in Table 4-7), these approximations are not equivalent, due to the different assumptions made in deriving them. Trial solutions of all four approximations suggest that they give values of $P_{\ell,S}$ that agree within a factor of 2. Figures 4-36 and 4-37 in the SPM show that variation of $P_{\ell,S}$ by a factor of 2 is within the scatter of the data defining the dependence of Q on $P_{\ell,S}$.

All results in this appendix, including the $P_{\ell,S}$ approximations, are for a coast with straight, parallel (but not necessarily evenly spaced) contours. All results assume no friction loss, which may become an important omission for waves traveling long distances over shallow, flat slopes (Bretschneider and Reid, 1954; Walton, 1972). Additional assumptions used in the derivations are summarized in Table 4-9 of the SPM. The essentially approximate basis for the longshore transport prediction must be recognized when the energy flux method is used. The more that the prototype conditions agree with the conditions

assumed in these derivations, the greater the confidence in the resulting estimate.

3. Summary.

This appendix provides the derivation for eight equations given in the SPM. These eight equations are the four equivalent equations for the long-shore energy flux, P_{ℓ} (Table 4-7), and the four nonequivalent equations for the longshore energy flux factor, $P_{\ell S}$ (Table 4-8) given in the SPM. The correspondence between equation numbers in this appendix and the SPM is as follows:

P_{ℓ} in	SPM Table 4-7	$P_{oldsymbol{\ell}oldsymbol{s}}$ in	SPM Table 4-8
SPM	This Appendix	SPM	This Appendix
4-31	A-9	4-35	A-28
4-32	A-19	4-36	A-32
4-33	A-20	4-37	A-34
4-34	A-21	4-38	A-36

Tables 4-7 and 4-8 of the SPM are reproduced as Figure A-1 on page 16 of this Appendix.

APPENDIX B

DISTINCTION BETWEEN SIGNIFICANT AND ROOT-MEAN-SQUARE WAVE HEIGHTS IN PREDICTING LONGSHORE TRANSPORT RATES

The four equivalent expressions for longshore energy flux, P_{ℓ} , given in Table 4-7 of the SPM are developed from small-amplitude linear theory (see App. A), and each expression for P_{ℓ} contains the wave energy density, \overline{E} , as a linear factor. The energy density per wave is

$$\overline{E} = \frac{W}{8} H^2 \tag{B-1}$$

where w is the weight density of seawater, and H is the wave height measured from crest to trough (see Fig. B-1). For a group of waves, N in number, each with wave height H_i , for i = 1 to N, the average energy density is given by

$$(\overline{E})_{avg} = \frac{1}{N} \sum_{i=1}^{N} \frac{w}{8} \Pi_{i}^{2}$$

$$= \frac{w}{8} (H_{rms})^{2}$$
(B-2)

where H_{rms} is the root-mean-square (rms) wave height given by

$$(H_{rms})^2 = \frac{1}{N} \sum_{i=1}^{N} H_i^2$$
 (B-3)

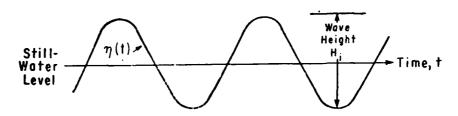


Figure B-1. Definition of wave height and amplitude for simple sinusoidal wave function.

Thus, the rms wave height is the proper wave height to use in evaluating \overline{E} and hence P_{ℓ} . In conditions where a uniform train of periodic waves exists, approximated in some laboratory experiments, all of the H_{ℓ} are equal. Thus, by equation (B-3), H_{ℓ} is identical to H_{rms} . In such cases H_{ℓ} is interchangeable with H_{rms} in equation (B-2). In natural conditions, however, such as ocean waves approaching a shore, the wave heights are usually not uniform. In such cases, the entire distribution of wave heights to determine H_{rms} must be considered or some other type of average wave height computed. It has been the general practice of coastal engineers to use an average wave height called the significant wave height, H_{s} , assumed equivalent to the mean of the highest

one-third of the wave heights in the distribution. This value was selected since it appeared to approximate the results of wave heights as reported by experienced observers making visual estimates of wave heights in the ocean (Sverdrup and Munk, 1947). In addition, since from equation (B-1), \overline{E} is proportional to H^2 , most of the energy is carried by the higher waves. So H_8 is a better representative wave height than the mean wave height in most coastal engineering problems.

However, the significant wave height, $H_{\rm S}$, does not equal the rms wave height, $H_{\rm PMS}$, so $H_{\rm S}$ cannot be used to evaluate $\overline{\rm E}$ or $P_{\rm L}$ directly. Thus, the relation between $H_{\rm S}$ and $H_{\rm PMS}$ must be determined. This can be done for restrictive conditions following Longuet-Higgens' (1952) work (see also Kinsman, 1965 (Sec. 3.4) and Harris, 1973).

To develop a relation between $H_{\mathcal{S}}$ and $H_{\mathcal{DMS}}$, it is assumed that the total wave energy density, \overline{E} , as given in equation (B-1), depends on the potential and kinetic energy densities, $\overline{E}_{\mathcal{P}}$ and $\overline{E}_{\mathcal{K}}$, respectively, both given by

$$\overline{E}_P = \overline{E}_K = \frac{w}{16} ||^2$$
 (B-4)

where $H = H_{rms}$. For this to hold, the following conditions must occur:

- (a) The waves are linear and have small amplitudes.
- (b) All waves of a single frequency arrive from the same direction.

(Multidirectional waves will not seriously affect the result as long as waves at a given frequency do not come from more than one direction.)

The wave heights will form a Rayleigh distribution if the following conditions are also assumed:

- (a) The wave spectrum contains a single, narrow band of frequencies.
- (b) The wave energy comes from a large number of different sources of random phase.

Let $\eta(t)$, the departure of the water surface from the mean sea level with respect to time, t, be expressed as the Fourier integral

$$\eta(t) = \int_{-\infty}^{\infty} A(\omega) e^{i\omega t} d\omega$$
 (B-5)

where $\Lambda(\omega)$ is the spectrum function (possibly complex though only the real part of the integral in eq. B-5 is taken) of the amplitude of $\eta(t)$ with respect to the frequency ω . At any time, twice the amplitude equals the wave height, $H_{\mathcal{L}}$, measured from trough to crest (see Fig. B-1).

If the spectrum function, A(ω), is appreciable only within a single, narrow frequency band of wavelength $2\pi/\omega_{\mathcal{O}}$ around frequency $\omega_{\mathcal{O}}$, then

$$\eta(t) = e^{i\omega_O t} \int_{-\infty}^{\infty} \Lambda(\omega) e^{i(\omega - \omega_O) t} d\omega$$

$$= e^{i\omega_O t} B(t)$$
(B-6)

Here, the factor $e^{i\omega_O t}$ represents a carrier wave of wavelength $2\pi/\omega_O$ and the integral B(t) represents an envelope function around the carrier wave (see Fig. B-2). The values of the amplitudes at the maximums and minimums of n(t) are approximately equal to the values of the envelope function at those points. Thus, the probability distribution of the amplitudes, and hence of the wave heights, is the same as the Rayleigh probability distribution of the values of B(t). Therefore, the probability, P(H), that the wave height H is between H and H + dH is given by

$$P(H) dH = -d \left[e^{-(H/H_{rms})^{2}}\right]$$

$$= \left(\frac{2H}{H_{rms}}\right) e^{-(H/H_{rms})^{2}} dH$$
(B-7)

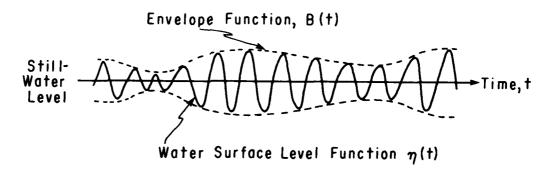


Figure B-2. Definition of envelope wave function for $\eta(t)$ with single narrow frequency band.

For N waves the fraction, p, of the wave heights which are larger than a given wave height, H, is equal to the probability that a wave height will exceed H and is given by

$$p = f_H^{\infty} P(H) dH$$

= $e^{-(H/H_{PMG})^2}$ (B-8)

Thus,

$$H = H_{yms} \left[\ln \left(\frac{1}{p} \right) \right]^{1/2}$$
 (B-9)

The mean value, H_p , of the wave heights larger than H is, using equations (B-7) and (B-8),

$$H_{p} = \frac{1}{p} \int_{H}^{\infty} HP(H) dH$$

$$= -e^{(H/H_{PMS})^{2}} \int_{H}^{\infty} Hd\left[e^{-(H/H_{PMS})^{2}}\right]$$
(B-10)

Integrating by parts, substituting equation (B-9), and dividing through by $\mathbf{H}_{\mathit{TMS}}$ give

$$\frac{H_{p}}{H_{pms}} = \frac{H}{H_{pms}} + \left(\frac{1}{H_{pms}}\right) e^{\left(H/H_{pms}\right)^{2}} \int_{H}^{\infty} e^{-\left(H/H_{pms}\right)^{2}} dH$$

$$= \left[\ln\left(\frac{1}{p}\right)\right]^{1/2} + \frac{1}{p} \int_{a}^{\infty} e^{-x^{2}} dx$$

$$= \left[\ln\left(\frac{1}{p}\right)\right]^{1/2} + \frac{1\sqrt{\pi}}{2p} \left[1 - \frac{2}{\sqrt{\pi}} \int_{0}^{a} e^{-x^{2}} dx\right] \tag{B-11}$$

where a = $[\ln(1/p)]^{1/2}$ and x = H/H_{ymg} . The ratio of the significant wave height, H_g , to the rms height is found by letting p = 1/3 (from the definition of H_g), which gives

$$\frac{H_{S}}{H_{\gamma ms}} = 1.416$$

$$\simeq \sqrt{2}$$
(B-12)

since $\sqrt{2} = 1.414$. Thus,

$$H_S^2 \simeq 2 H_{rms}^2 \tag{B-13}$$

From equation (B-2), $\overline{E} \propto H^2$ and from equation (A-9) of Appendix A, $P_{\ell} \propto \overline{E}$. This means that if the significant wave height is used to compute \overline{E} or P_{ℓ} , the result will be approximately twice what it should be using the rms wave height.

Since coastal engineers are more familiar with H_{S} than H_{PMS} , all long-shore transport predictions in the SPM are designed so that H_{S} is used when the equation requires a wave height. (To emphasize that the resulting P_{LS} is approximately twice the theoretical longshore energy flux, P_{LS} is called the "longshore energy flux factor" in the SPM.) The design equations in the SPM

have been "calibrated" for use with H_S by plotting the field data in Figure 4-37 of the SPM using H_S to calculate $P_{l,S}$. The resulting line in Figure 4-37 yields equation 4-40 of the SPM:

$$Q = (7.5 \times 10^3) P_{0.8}$$
 (B-14)

The 23 field data points used to determine equation (B-14) are shown in Figure 4-37 of the SPM. Nine data points of Watts (1953) and Caldwell (1956) (one of Caldwell's data points is missing from Fig. 4-37 since Q and $P_{l,8}$ had opposite signs; see App. C) were reported in terms of significant wave height. Thus, the values for $P_{l,8}$ are taken directly from these reports. Similarly, the one data point of Moore and Cole (1960) (not shown in Fig. 4-37 since it plots off the scale) is assumed to be in terms of significant wave height, although this is not stated in their report. The 14 data points of Komar (1969), however, are reported in terms of rms wave height and so his values for $P_{l,8}$ are multiplied by a factor of 2 before being used in Figure 4-37.

In Figure 4-36 of the SPM, 161 data points from 5 laboratory studies (listed in App. C) are shown in addition to the 25 field data points. In the laboratory studies a train of (relatively) uniform waves was used in each test, so that the wave height measured is approximately equal by definition to the rms wave height. Since the use of the laboratory wave heights gives the theoretical longshore energy flux based on H_{27MS} , they were multiplied by a factor of 2 before being used in Figure 4-36 to make them consistent with the energy flux factors plotted for the field data.

Because it is doubtful that the numerous assumptions relating H_{S} to H_{PMS} are all valid at the same time, the basic relation between Q and P_{LS} (eq. B-14) might be considered an empirical relation, calibrated for field use with significant wave height data. The engineering application depends on how well the equations for P_{LS} predict Q when used in equation (B-14).

APPENDIX C

FIELD AND LABORATORY DATA IN THE SPM ENERGY FLUX DISCUSSION

Figure 4-36 in the SPM is a plot of longshore transport rate, Q, versus longshore energy flux factor, P_{ls} , for both field and laboratory data. A similar plot of Q versus P_{ls} (Fig. 4-37 of the SPM) presents only the field data. The empirical relation,

$$Q = (7.5 \times 10^3) P_{ls}$$
 (C-1)

where Q is measured in cubic yards per year and P_{LS} is measured in footpounds per second per foot of beach front, is a visual fit of the field data in Figure 4-37. It is given as equation (4-40) in the SPM.

The field data are taken from Watts (1953), Caldwell (1956), Moore and Cole (1960), and Komar (1969). The laboratory data are taken from Krumbein (1944), Saville (1950), Shay and Johnson (1951), Sauvage and Vincent (1954), and Fairchild (1970). These data are described and listed in Das (1971) and the derivation of empirical relations of the form of equation (C-1) is summarized in Das (1972).

The field data include 25 data points, although only 23 of them are shown on Figure 4-37 of the SPM. Four data points come from Watts (1953). The long-shore transport rate, Q, was measured by surveying the amount of sand pumped into a detention basin by a bypassing plant on the jetty at south Lake Worth inlet in Florida. Surveys were made after every 6 hours of pumping or daily, whichever was more often. Four monthly totals are used. The equivalent long-shore energy flux factor, P_{ls} (denoted as E_T in Watts' paper), was computed from linear theory

$$P_{ls} = \frac{w}{8} L I I^2 \left[1 - M \left(\frac{II}{L} \right)^2 \right] n \frac{t}{T} \sin \alpha \cos \alpha$$
 (C-2)

where

w = weight density of seawater

L = wavelength

H = wave height

M = a function of d/L where d is the water depth

T = wave period

 α = the angle between the wave crests and the shoreline

t = conversion of seconds to days

n =solution given by equation (2.68) of Wiegel (1964),

$$n = \frac{1}{2} \left[1 + \frac{4\pi \frac{d}{L}}{\sinh \left(\frac{4\pi d}{L} \right)} \right]$$
 (C-3)

Substituting the value for w, taking the shallow-water approximation that the factor $[1 - M(H/L)^2] \simeq 1$, and evaluating L from linear theory by

$$L = \frac{g}{2\pi} T^2 \tanh \left(\frac{2\pi d}{L}\right)$$

$$L = 5.12 T^2 \tanh\left(\frac{2\pi d}{L}\right)$$
 (C-4)

equation (C-2) becomes

$$P_{ls} = 41 \text{ TH}^2 \text{ n } \tanh\left(\frac{2\pi d}{L}\right) \text{ t } \sin \alpha \cos \alpha \text{ (foot-pounds per day per foot) (C-5)}$$

Note that Watts (1953) computes P_{QS} in units of foot-pounds per day per foot of beach front, which is converted in the SPM to units of foot-pounds per second per foot of beach front.

Significant wave height and period were taken from the analysis of the wave records (a 12-minute record every 4 hours) of a pressure gage installed at the seaward end of the Palm Beach pier, located 17.7 kilometers (11 miles) north of south Lake Worth inlet, in approximately 5.2 meters (17 feet) of water. Wave direction was obtained from twice daily observations using an engineer's transit with sighting bar and auxiliary sights from an elevated point 5.6 kilometers (3.5 miles) north of the inlet. No mention is made of how the quantities d and L are evaluated.

There are six data points listed in Caldwell (1956). One of these six data points is not plotted in Figure 4-37 of the SPM. That point represents a condition where the measured longshore transport and the computed longshore energy flux are in opposite directions. The longshore transport rate, Q, was measured by comparing successive sets of surveys of the beach out to the 6.1-meter (20 feet) depth contour at 152.4-meter (500 feet) intervals along the 3.4kilometer (11,000 feet) study area immediately south of the jetties at Anaheim Bay, California. The longshore component of wave energy flux, $P_{\mbox{\it ls}}$, was computed from equation (C-5) and, as before, converted to units of foot-pounds per second per foot of beach front for use in the SPM. Significant wave height and period were taken from analysis of the wave records of a step-resistance wave gage, supplemented by hindcasting when necessary, and checked by a float-type wave gage. The gages were installed on the seaward end of the Huntington Beach pier, located about 10 kilometers (6 miles) south of Anaheim Bay. Wave direction was obtained from wave hindcasting and wave refraction analysis using synoptic weather charts. Again, no mention is made of how d and L are evaluated.

One data point is taken from an observation in Moore and Cole (1960). The longshore transport rate, Q, was measured by comparing two surveys marking the growth of a spit across the outlet to Tasaychek Lagoon, Alaska. The long-shore energy flux, P_{ls} , was computed by Saville (1962) using the following equation (T. Saville, CERC, personal communication, 1974)

$$P_{ls} = \frac{wLll^2}{8} n \frac{t}{T} \sin \alpha \cos \alpha \qquad (C-6)$$

No mention is made in Moore and Cole (1960) of how or where the wave height, period, and angle between wave crest and beach are measured. Saville assumes that they are deepwater values and the SPM assumes that the wave height is significant wave height. The computed value for P_{ls} is larger by nearly an order of magnitude than in the other field data and hence does not plot on the scale of Figure 4-37 of the SPM. It would plot below the line in Figure 4-37 given by equation (C-1).

Fourteen data points are taken from Komar (1969), 10 from work at El Moreno Beach, Mexico, and 4 from Silver Strand Beach, California. The longshore transport rate, Q, was calculated from the movement of fluorescent tracer sand, determined from the amount and location of the tracer sand in regularly spaced core samples taken on the beach about 3 to 4 hours after injection of the tracer. Wave energy flux and wave direction were measured by an array of digital wave sensors (wave staffs and pressure transducers) in the nearshore region. Integrating the energy densities under the spectra peak of the records of these wave sensors gives the mean square elevation of the water surface, $<\eta^2>$. The energy of the wave train is then

$$\overline{E} = \rho g < \eta^2 > \tag{C-7}$$

The wave period of the wave train is at the point of maximum energy density for the particular spectra peak being analyzed. By knowing the water depth, group velocity can be found. The wave energy flux per unit crest length, $\overline{EC}_{\mathcal{G}}$, may now be calculated. Comparing wave records of various gages of the array produces the wave angle, α , which gives

wave energy flux unit beach length =
$$\overline{EC}_g$$
 cos α

Assuming no energy dissipation until breaking, the energy flux per unit beach length at the breaker zone is

$$(\overline{E}C_g \cos \alpha)_b = \overline{E}C_g \cos \alpha$$
 (C-8)

Equation (C-8) is then multiplied by the $\sin \alpha_b$, where α_b is measured in the surf zone or calculated from α using Snell's law

$$\sin \alpha_b = \frac{C_b}{C} \sin \alpha \tag{C-9}$$

to give the energy flux factor

$$P_{ls} = (\overline{E}C_g \cos \alpha)_b \sin \alpha_b$$
 (C-10)

In (C-9), C_b is evaluated from phase speed near breaking assumed to be (Komar, 1969)

$$C_b = (2.28 \text{ gH}_b)^{1/2}$$
 (C-11)

Note that Komar uses rms wave height to compute values for P_{ls} . To make his values consistent with the other field data points in Figure 4-37 of the SPM,

which are computed from significant wave height, Komar's values for P_{ls} are multiplied by a factor of 2 before being used in the SPM (see App. B).

Two additional sources of field data are included in Figure 6 of Das (1972), a plot of Q versus P_{ls} similar to Figure 4-36 of the SPM. These sources are 5 data points from Johnson (1952) and 14 data points from Thornton (1969). Neither source is included in Figures 4-36 and 4-37 of the SPM nor are they used in the derivation of the empirical relation between Q and P_{ls} , equation (C-1). Johnson's data do not include wave direction, but the corresponding points must plot above the line given by equation (C-1) in Figure 4-37 for reasons given in Galvin and Vitale (1977). Thornton's data are from bedload traps between the inner and outer bar, and represent minimum values of Q.

The design prediction (eq. C-1) is based solely on field data, but Figure 4-36 does show laboratory data for comparison. Das (1971) lists 177 laboratory data points, and of these, 161 are shown in Figure 4-36 of the SPM. In the two data points from Price and Tomlinson (1968), crushed coal with a specific gravity of 1.35 (as opposed to 2.65 for the quartz that makes up most beach sand) was used. In 14 of the 17 data points from Sauvage and Vincent (1954), sediments with specific gravities of 1.1 and 1.4 were used. Thus, these 16 lightweight data points were not included in Figure 4-36.

The longshore energy flux, P_{ls} , for the laboratory data was computed, using equation (32) of Das (1972)

$$P_{ls} = \frac{1}{2} \frac{\rho g}{8} H_o^2 L_o NK_R^2 \sin \alpha_b \cos \alpha_b$$
 (C-12)

 $H_{\mathcal{O}}$ is the deepwater wave height, $L_{\mathcal{O}}$ is the deepwater wavelength, and N is the number of waves per day, given by

$$N = \frac{(86,400 \text{ seconds per day})}{T}$$
 (C-13)

where the period, T, is measured in seconds, and K_R is the refraction coefficient. The leading factor of 1/2 in equation (C-12) is the deepwater approximation for n as given in equation (C-3).

The value for H_O comes from

$$H_{O} = \frac{H_{O}'}{K_{R}}$$

$$= \frac{H}{\left(\frac{H}{H_{O}'}\right) K_{R}}$$
(C-14)

where H_O' is the deepwater wave height unaffected by refraction, the ratio H/H_O' is obtained from Wiegel's tables (SPM, App. C, Table C-1), and the

refraction coefficient, K_R , is given by equation (7-12) of Wiegel (1964)

$$K_R = \left(\frac{\cos \alpha_O}{\cos \alpha}\right)^{1/2} \tag{C-15}$$

The depth, d, the period, T, and the angle α are measured in the laboratory studies. The deepwater approximation for the wavelength, L_O = 5.12 T^2 , obtains d/L, and hence L, from d/L_O and Wiegel's tables. Then, α_O can be calculated from

$$\sin \alpha_O = \frac{L_O}{L} \sin \alpha \qquad (C-16)$$

and α_b can be calculated from

$$\sin \alpha_b = \frac{L_b}{L_o} \sin \alpha_o \tag{C-17}$$

so that equation (C-15) can be evaluated to give the refraction coefficient, $\mathbf{K}_{\mathcal{R}}$, at the breaker position.

To summarize, 23 field data points were used to derive equation (C-1), the relation between Q and P_{ls} . The values for P_{ls} for the nine data points taken from Watts (1953) and Caldwell (1956) were computed from equation (C-2), using values of significant wave height, period, and direction, as estimated by Watts (1953) and Caldwell (1956). The values of P_{ls} for the 14 data points taken from Komar (1969) were computed from equation (C-10) whose input comes from the mean square water elevation, $<\eta^2>$, obtained from the wave sensor records, the use of linear theory, and equations (C-11) and (C-9) to get the α_b . It is again emphasized that only field data were used to compute equation (C-1), and the equations for P_{ls} require the use of the observed significant height.

Galvin, Cyril

Coastal Engineering Research Center; Springfield, Va.: available from The SPM energy flux method for predicting longshore transport rate / by Cyril Galvin and Charles R. Schweppe - Fort Belvoir, Va. : U.S. National Technical Information Service, 1980.

.34) p. : ill. ; 27 cm. - (Technical paper - U.S. Coastal Engineering Research Center; no. 80-4). Cover title.

Includes bibliographical references.

tinction between significant and root-mean-square wave heights in pre-Appendixes: A; Derivation of longshore energy flux factor. B; Disdicting longshore transport rates. C; Field and laboratory data in the SPM energy flux discussion.

The energy flux method in CERC's Shore Protection Manual (SPM) is described in detail.

1. Coastal engineering. 2. Wave height. 1. Title. II. Schweppe, Charles R. III. Series: U.S. Coastal Engineering Research Center. Technical paper no. 80-4.

dalvin, Cvril

Coastal Engineering Research Center ; Springfield, Va. : available from The SPM energy flux method for predicting longshore transport rate / by Cvril Galvin and Charles R. Schweppe - Fort Belvoir, Va. : U.S. National Dechnical Information Service, 1980.

34) p. : ill. ; 27 cm. - (Technical paper - U.S. Coastal Engineering Research : enter ; no. Mos4), Cover title.

Includes bibliographical references.

Appendices: A: Derivation of long-hore energy flux factor, B; Distinction retween significant and root-mean-square wave heights in predisting longshore transport rates, stylield and laboratory data in

The energy flux method in AERC's Shore instruction Manual (SPM) is the SPM energy time disquestion.

odstal engineering, 2. Wave beight, 1. lithe. (1. Schweppe, carles 8. Iil. Gerlest (i.s. Coastal Engineering Research Center. territor at tapell dos Borto described in detail.

. . . .

Galvin, Cyril

Coastal Engineering Research Center ; Springfield, Va. : available from The SPM energy flux method for predicting longshore transport rate / by Cyril Galvin and Charles R. Schweppe - Fort Belvoir, Va. ; U.S. National Technical Information Service, 1980.

[34] p. : ill. ; 27 cm. - (Technical paper - U.S. Coastal Engineering Research Center; no. 80-4). Cover title.

Includes bibliographical references.

Appendixes: A; Derivation of longshore energy flux factor. B; Distinction between significant and root-mean-square wave heights in predicting longshore transport rates. C; Field and laboratory data in the SPM energy flux discussion.

The energy flux method in CERC's Shore Protection Manual (SPM) is described in detail.

1. Coastal engineering. 2. Wave height. I. Title. II. Schweppe, Charles R. III. Series: U.S. Coastal Lighteering Research Center. Technical paper no. 80-4.

.U581tp

627

Galvin, Cyril

by Cyril Galvin and Charles R. Schweppe - Fort Belvoir, Va. : U.S. Coastal Engineering Research Center ; Springfield, Va. : available from The SPM energy flux method for predicting longshore transport rate / National Technical Intormation Service, 1980,

34 p. : ill. ; 27 cm. - (Technical paper - U.S. Coastal Engineering Research Center; no. 80-4). Cover title.

Includes bibliographical references.

Appendixes: A; Derivation of longshore energy flux factor. B; histinction between significant and root-mean-square wave heights in predicting longshore transport rates. (; Field and laboratory data in the SPM energy flux discussion.

The energy flux method in (ERC's Shore Protection Manual (SPM) is described in detail.

2. wave height. 1. Title. 11. Schweppe. Charles R. 111. Series: U.S. Coastal Engineering Research Center. !. Coastal engineering. echnical paper no. 80-4.

627

Lalvin, Cyril

The SPM energy flux method for predicting long-Score transport rate / by Cyril Galvin and Charles R. Schweppe - Fort Belvoir, Va. : U.S. Coastal Engineering Research Center ; Springfield, Va. : available from National Technical Information Service, 1980.

List coastal Engineering theemical paper Research (enter; no. 80-+), cover title. 34] p. : 111, ; 27 cm.

Appendixes: A; Derivation of long-hore energy flux factor, B; Distinction retween stanificant and root-mean-square wave heights in predicting longsmore transport rates. C; Field and laboratory data in Includes mibliographical reterences. the SPM energy flux discussion.

the energy flux method in UERC's Shore Protection Manual (SPM) is

istal engineering. 2. Aave Feight. 1. lithe. 11. Schweppe, described in detail.

1. State engineering. 2. Adverseigt. 1. little. II. Schweppe.

1. Tries E. III. erries: 1.5. Coastal Engineering Research Center. lemnikal paper n. 30-4.

a fid bosime risk becar is enter; springfield, Va. : available from Notional services (1989).

Yethorical services (1989).

Yethorical services (1989). [5] Py Barra March and tot tredicting long-score transport rate / by Peril calvin and Parles R. Noberppe - Fort Relyofr, Va. 11.5.

The control of the control of pages of the control of pages of the control of the Company of the control of the

of the transmission of the

.. litie. II. schwenper. or had broaderstan Accessory Contour, to state of the term of the state of the first

alvin, Cyril

Cuastal Engineering Research Center ; Springfield, Va. : available from The SPM energy flux method for predicting longshore transport rate / by Cyril Galvin and Charles R. Schweppe - Fort Belvoir, Va. : U.S. National Technical Information Service, 1980.

|34| p. : ill. ; 27 cm. - (Technical paper - U.S. Coastal Engineering Research Center ; no. 80-4). Cover title.

tinction between significant and root-mean-square wave heights in predicting longshore transport rates. C; Field and laboratory data in Includes bibliographical references.
Appendixes: A; Derivation of longshore energy flux factor. B; Disthe SPM energy flux discussion.

The energy flux method in CERC's Shore Protection Manual (SPM) is described in detail.

1. Coastal engineering. 2. Wave height. I. Title. II. Schweppe, Charles R. 111. Series: U.S. Coastal Engineering Research Center. Fechnical paper no. 80-4.

.U581tp TC203

no. 80-4

627

Galvin, Cyril

Coastal Engineering Research Center; Springfield, Va.: available from The SPM energy flux method for predicting longshore transport rate / by Cyril Galvin and Charles R. Schweppe - Fort Belvoir, Va. : U.S. National Technical Information Service, 1980.

34 p. : ill. ; 27 cm. - (Technical paper - U.S. Coastal Engineering

Research Center; no. 80-4). Cover title. Includes hibliographical references.

tinction between significant and root-mean-square wave heights in pre-Appendixes: A; Derivation of longshore energy flux factor. B; Disdicting longshore transport rates. C; Field and laboratory data in the SPM energy flux discussion.

The energy flux method in CERC's Shore Protection Manual (SPM) is described in detail.

1. Coastal engineering, 2. Wave height, 1. Title, 11. Schweppe, charles R. 111. Series: U.S. Coastal Engineering Research Center. Inchnical paper no. 80-4.

, ,

627